


VDO Ammeter Connections

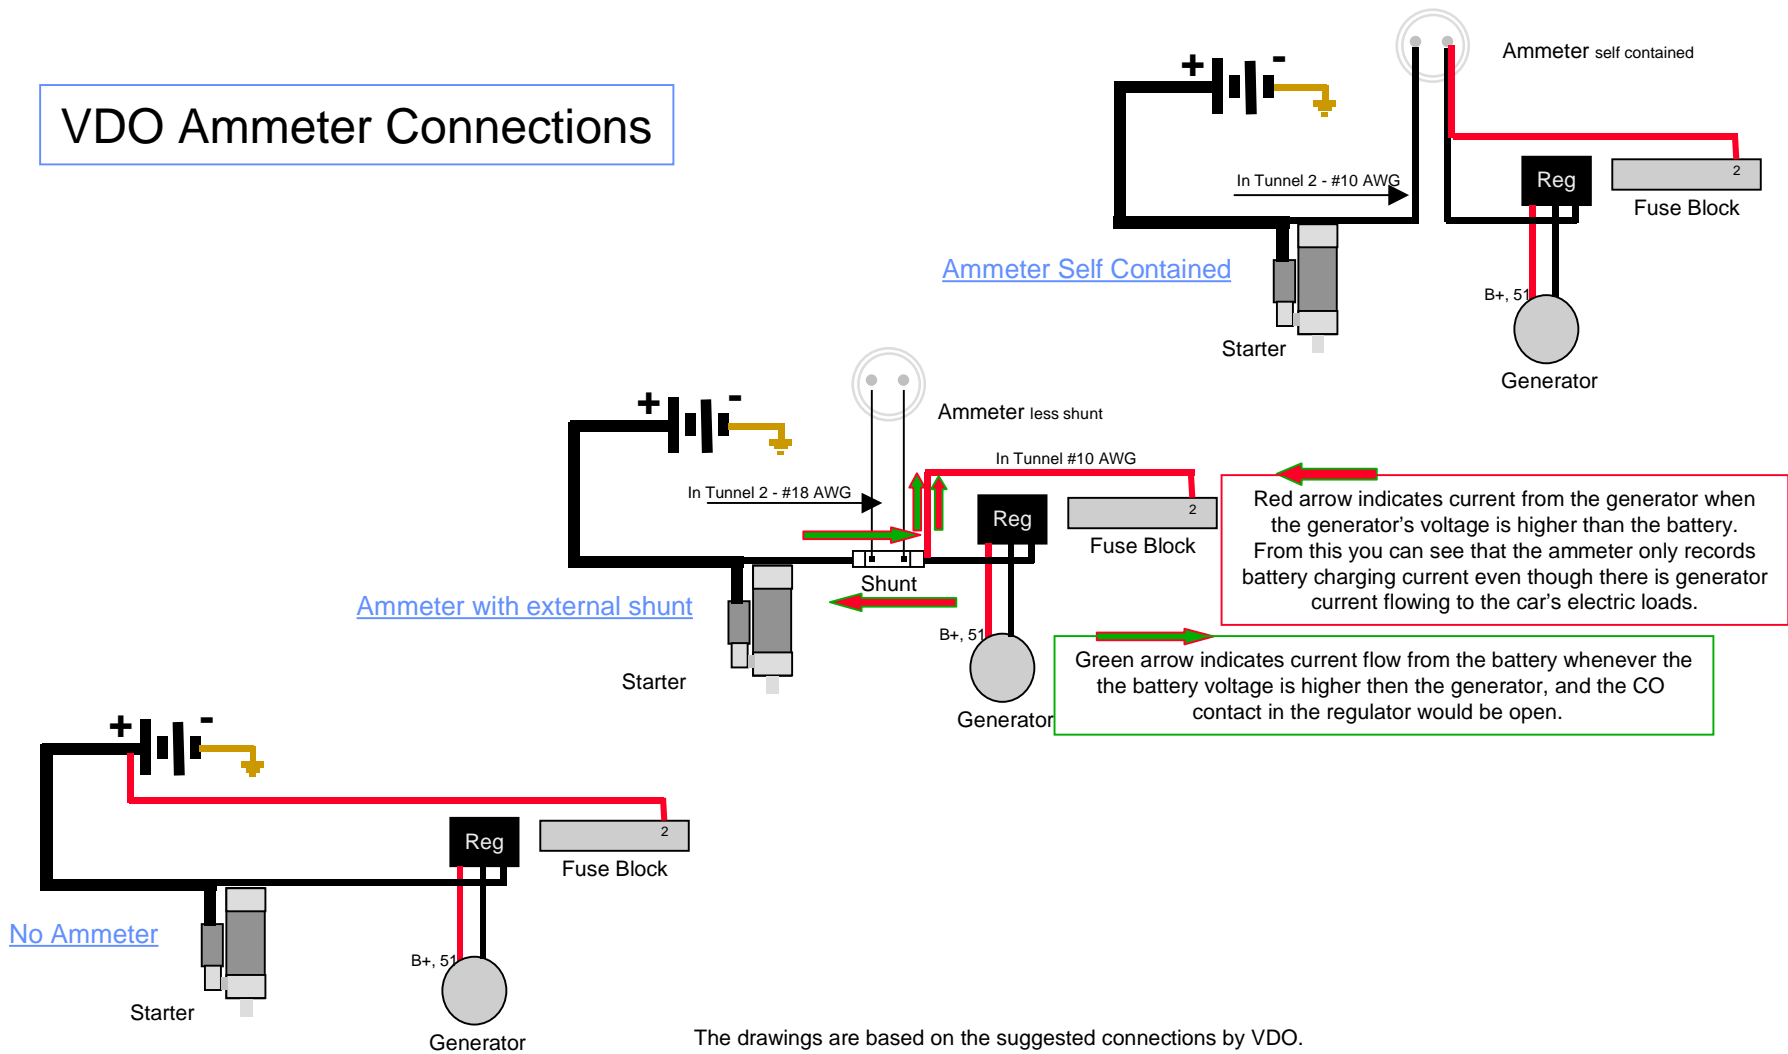

The drawings are based on the suggested connections by VDO.
 With a zero center ammeter, generator current less car load current will read to the right. *Battery charging current.*
 With engine off (not charging) car load current will read to the left. *Battery discharging current.*